


Regasketing

- 1 Open the plate heat exchanger according to page 8, and remove the plate that is to have a new gasket.
- 2 Remove the old gasket.
- 3 Attach the clip-on gasket to the plate. Slip the gasket prongs under the edge of the plate.

Glued gaskets

Separate gluing instructions will be delivered together with the glue.

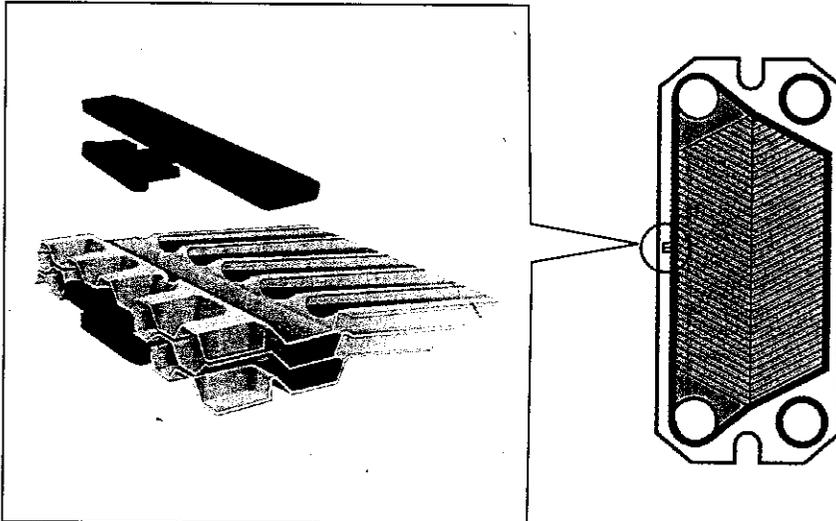

Note!

Make sure the two gasket prongs are in correct position.

- 4 Proceed with the next plate to be regasketed until all plates in need of regasketing are done with.
- 5 Close the plate heat exchanger according to page 12.