


### 拨叉型舵机安装基准资料(3)

#### 舵柄和滚轮之间间隙基准

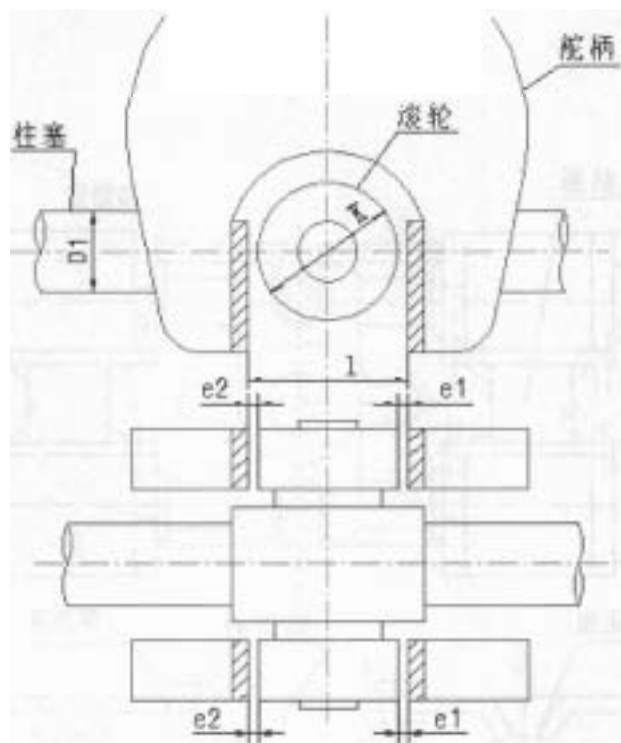

$$e1 = e2$$

(mm)

6-K Max. 0.25 mm