

温度指示及报警记录表

序号 NO	名 称 NAME	显示温度 IND.TEM.	测量温度. MEAS.TEMP.	报警设定温度 SET TEMP.	结 论 CONCUSION	备 注 REMARK
1	1#货油泵泵壳温度 NO.1 CARGO OIL P. CASING TEMP.	66		65		
2	1#货油泵前轴承温度 NO.1 CARGO OIL P. FOR. BEARING TEMP.	76		75		
3	1#货油泵后轴承温度 NO.1 CARGO OIL P. AFT. BEARING TEMP.	77		75		
4	1#货油泵穿舱装置温度 NO.1 CARGO OIL P. BUK. PENE. TEMP.	77		75		
5	2#货油泵泵壳温度 NO.2 CARGO OIL P. CASING TEMP.	67		65		
6	2#货油泵前轴承温度 NO.2 CARGO OIL P. FOR. BEARING TEMP.	76		75		
7	2#货油泵后轴承温度 NO.2 CARGO OIL P. AFT. BEARING TEMP.	77		75		
8	2#货油泵穿舱装置温度 NO.2 CARGO OIL P. BUK. PENE. TEMP.	76		75		
9	3#货油泵泵壳温度 NO.3 CARGO OIL P. CASING TEMP.	66		65		
10	3#货油泵前轴承温度 NO.3 CARGO OIL P. FOR. BEARING	76		75		
11	3#货油泵后轴承温度 NO.3 CARGO OIL P. AFT. BEARING TEMP.	76		75		
12	3#货油泵穿舱装置温度 NO.3 CARGO OIL P. BUK. PENE. TEMP.	76		75		
13	4#货油泵泵壳温度 NO.4 CARGO OIL P. CASING TEMP.	66		65		

序号 NO	名 称 NAME	显示温度 IND.TEM.	测量温度. MEAS.TEMP.	报警设定温度 SET TEMP.	结 论 CONCUSION	备 注 REMARK
14	4#货油泵前轴承温度 NO.4 CARGO OIL P. FOR. BEARING TEMP.	76		75		
15	4#货油泵后轴承温度 NO.4 CARGO OIL P. AFT. BEARING TEMP.	76		75		
16	4#货油泵穿舱装置温度 NO.4 CARGO OIL P. BUK. PENE. TEMP.	76		75		
17	1 # 压载泵穿舱装置 NO.1 BALLAST P. BUK. PENE. TEMP.	66		65		
18	2 # 压载泵穿舱装置 NO.1 BALLAST P. BUK. PENE. TEMP.	66		65		
19	货油泄放泵穿舱装置 CARGO DRAIN P. BUK. PENE TEMP.	66		65		
20	洗舱泵穿舱装置 CLEANING P. BUK. PENE. TEMP.	66		65		
21	货油泄放舱温度 CARGO DRAIN TANK TEMP.	91		90		
22	洗舱水温度 CLEANING WATER TEMP.	91		90		

实验结果:

报 验 者: Test personal:	验 船 师: Surveyor:	船 东 代 表: Owner' s Representative:
--------------------------	---------------------	--------------------------------------