




Spar Type

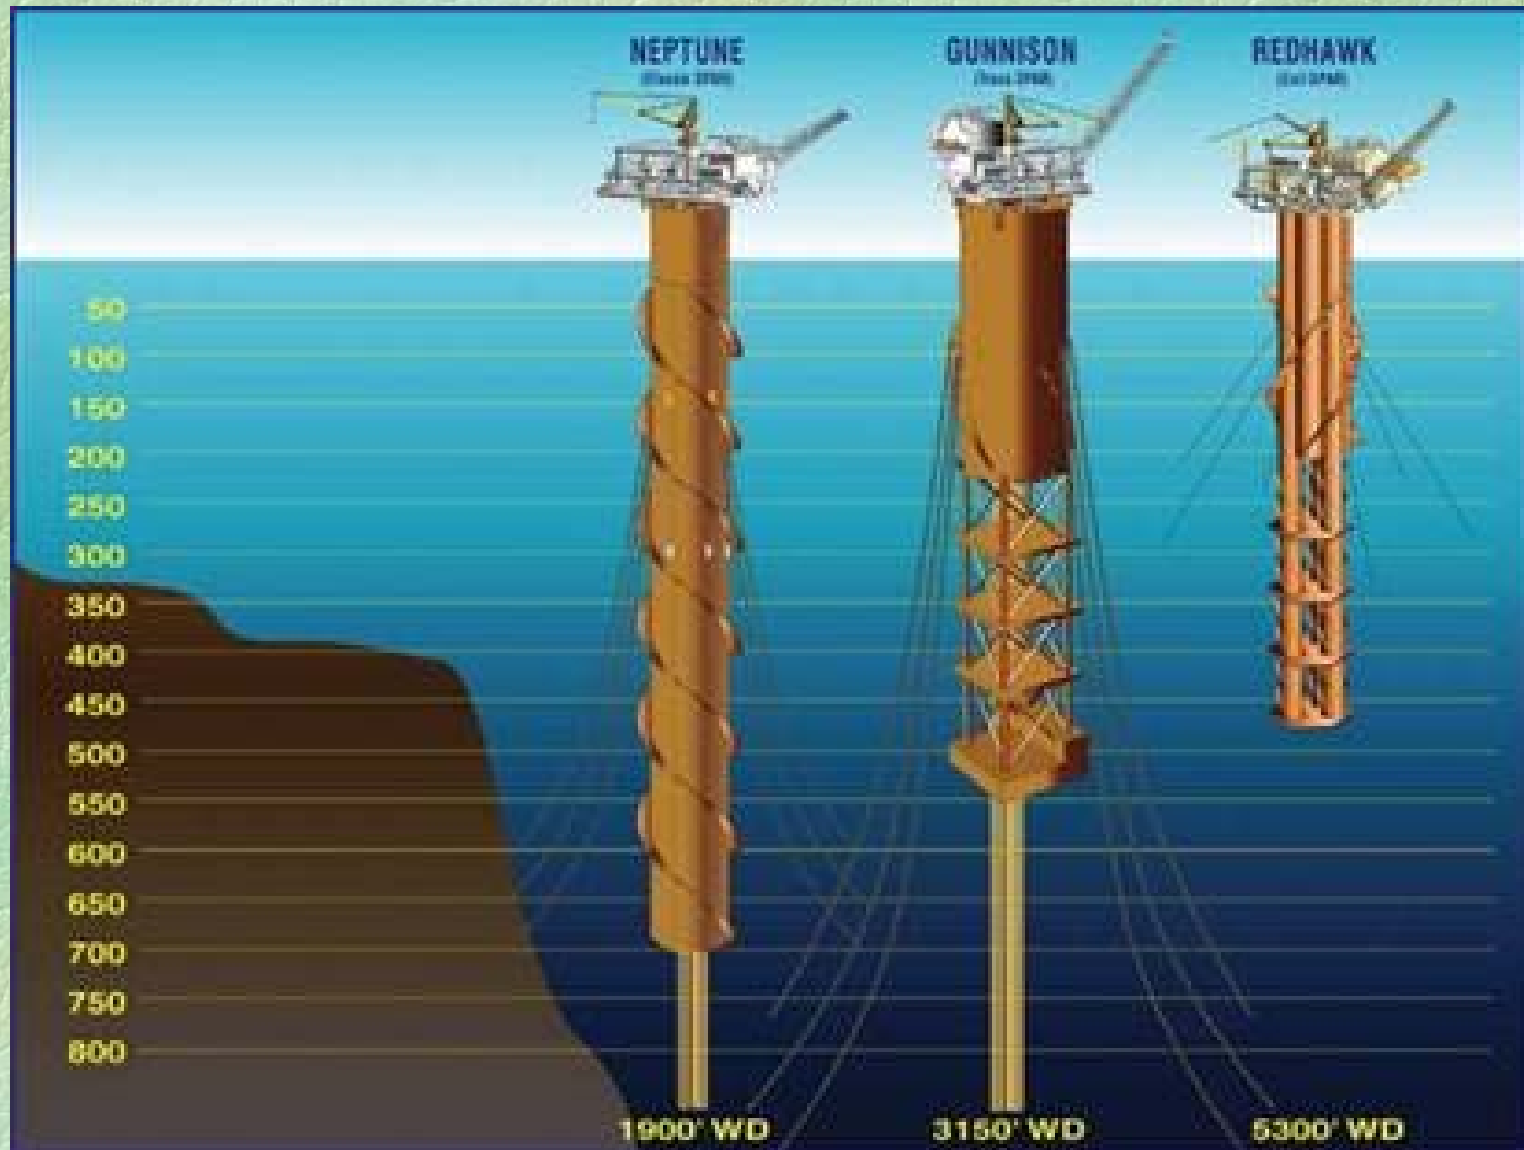


Classic Spar

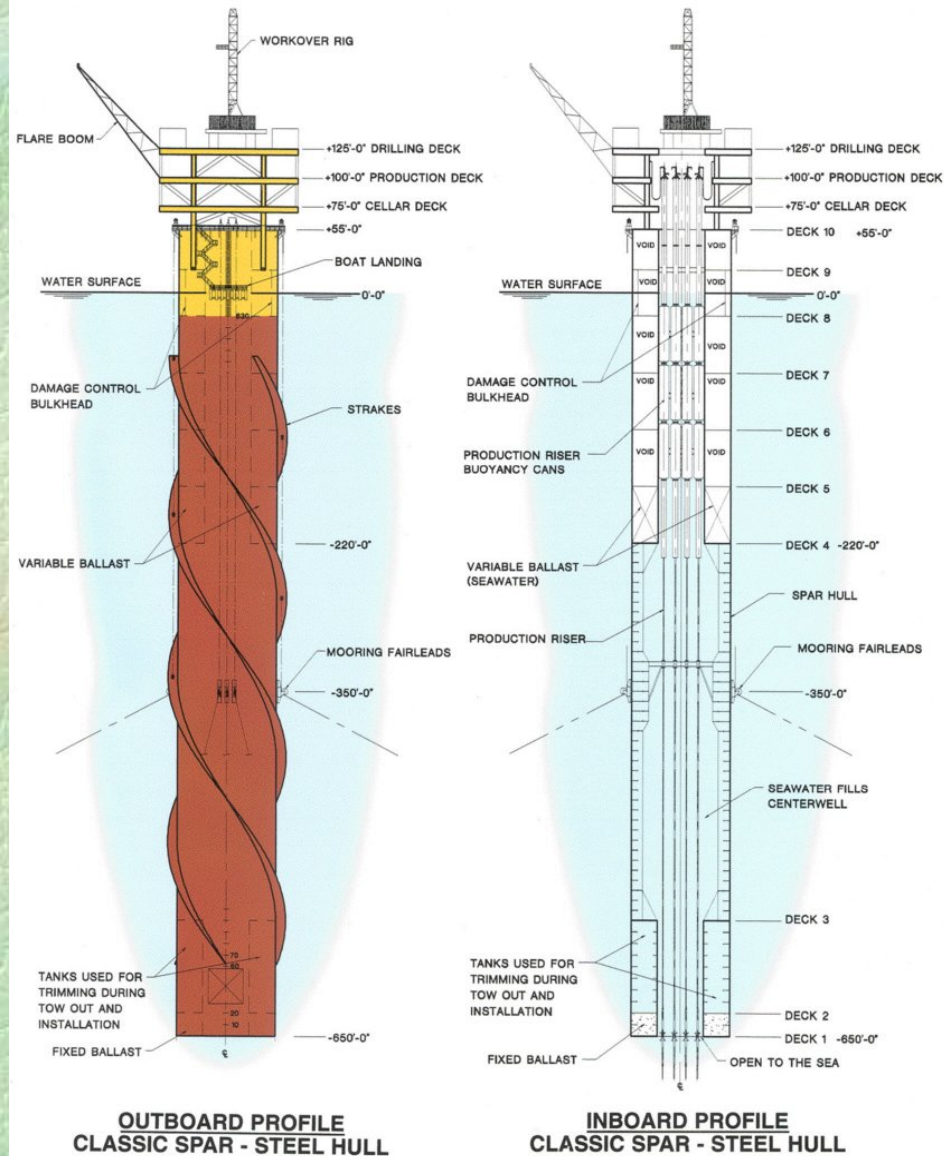


Truss Spar

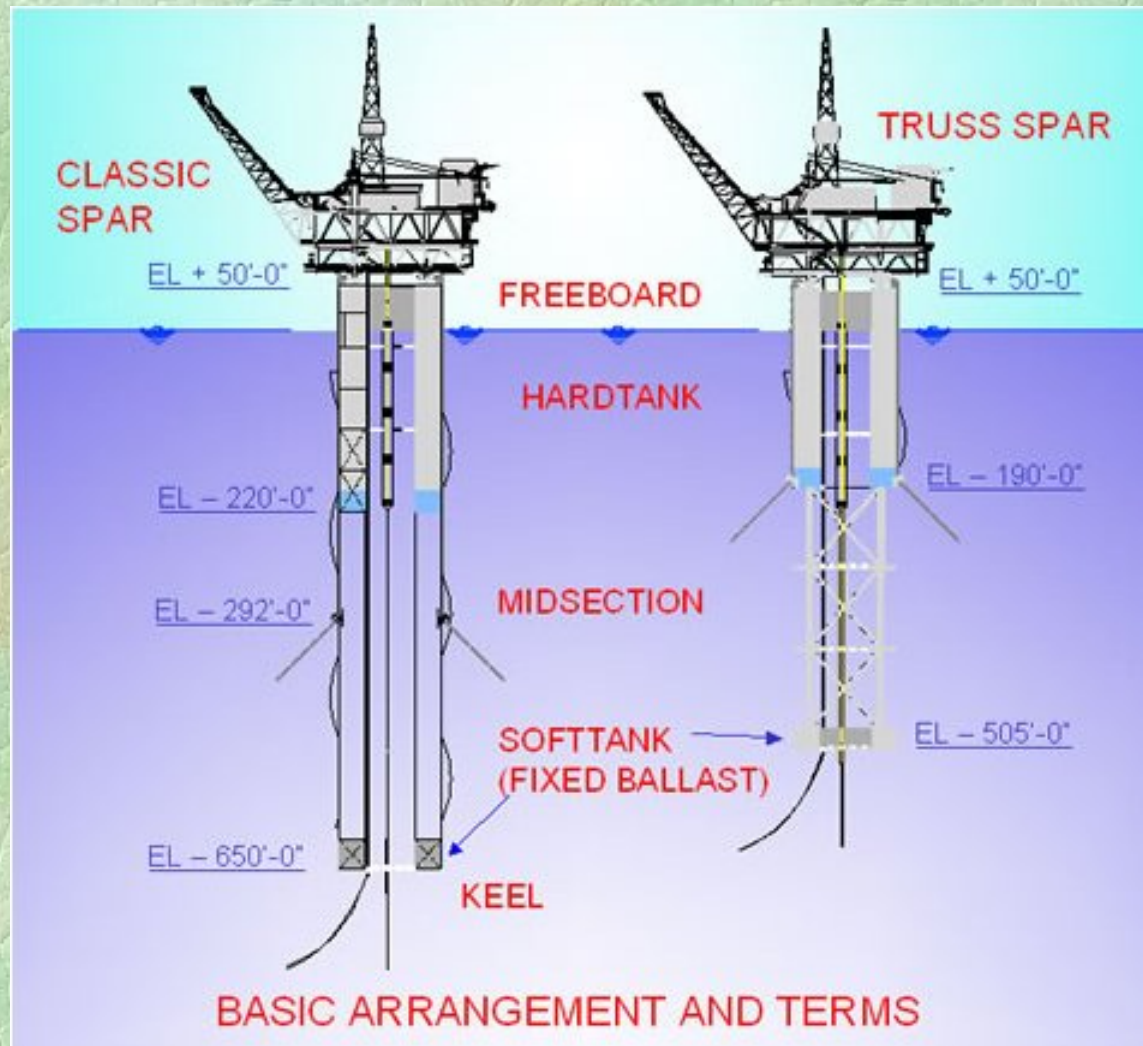


Truss Spar

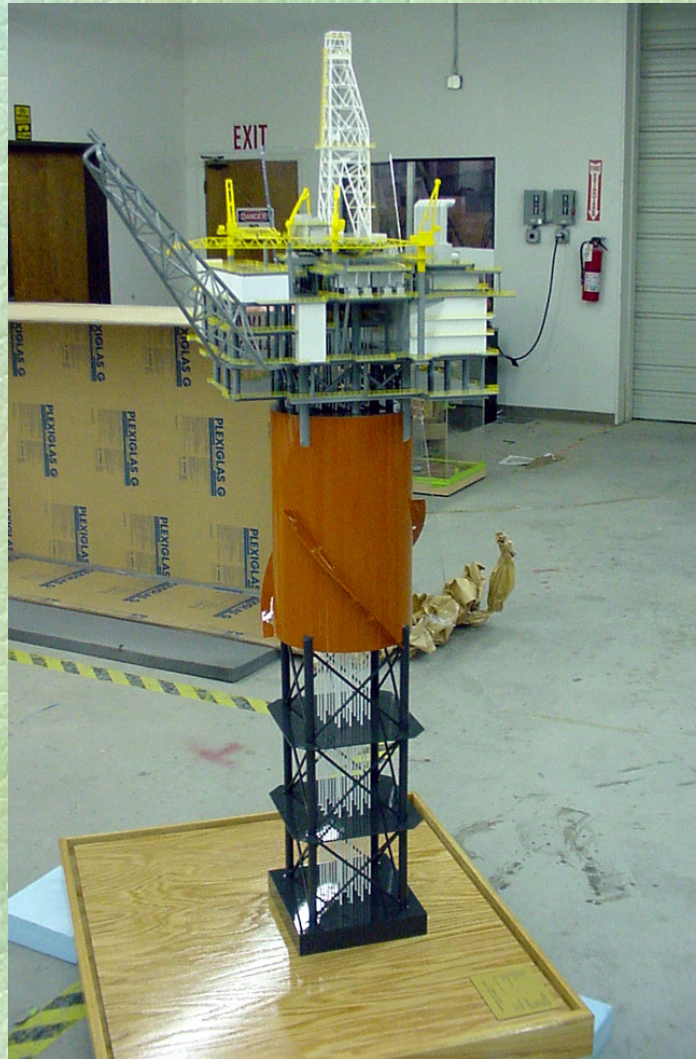

Truss Spar

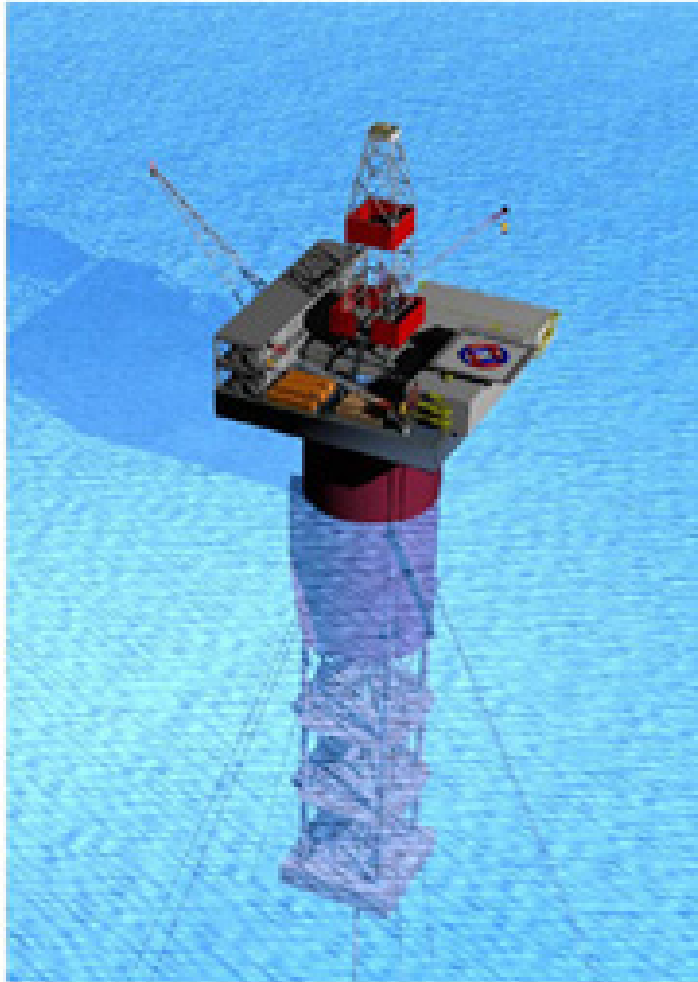

TRUSS SPAR

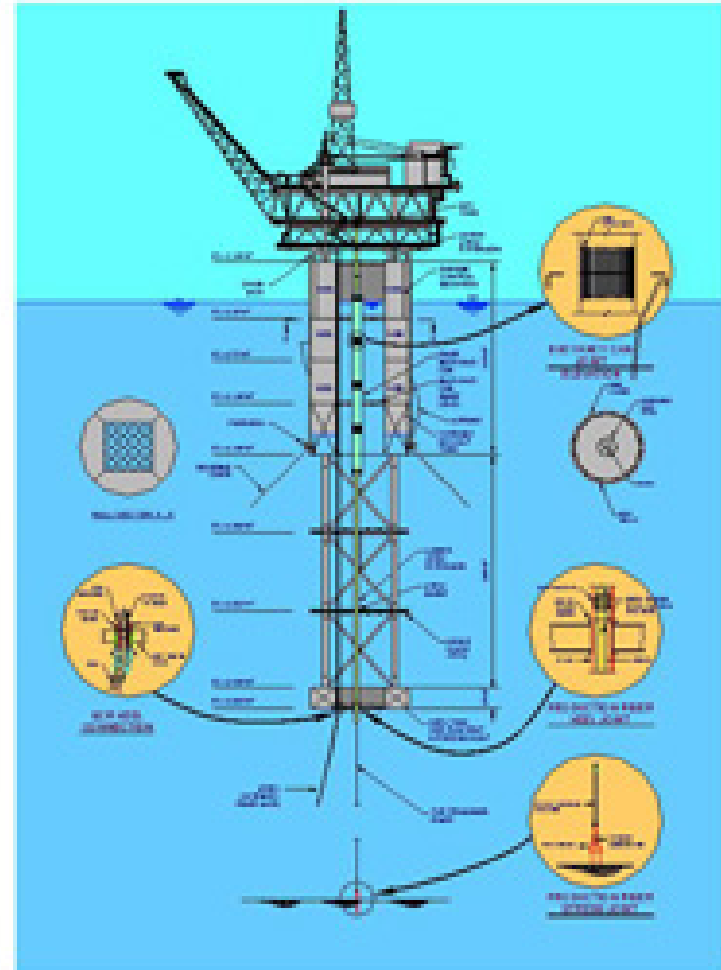

TRUSS SPAR INBOARD PROFILE


Truss Spar Under Construction




Truss Spar Under Construction




Cell Spar

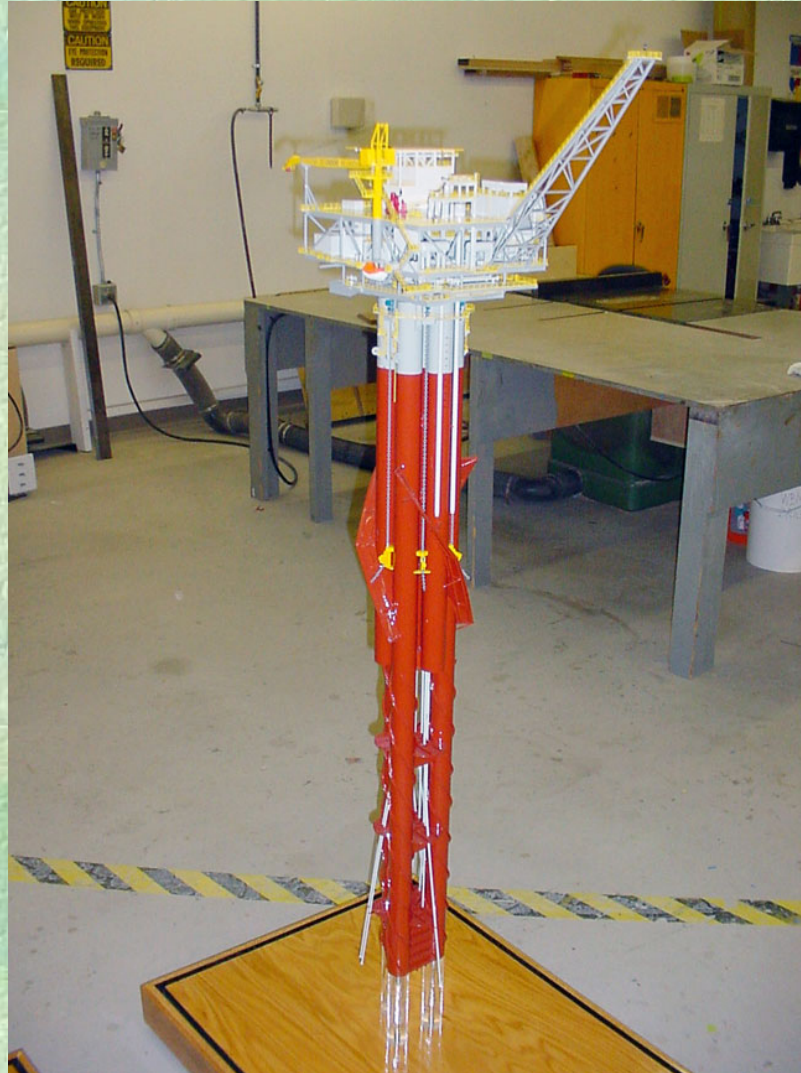

Drillship

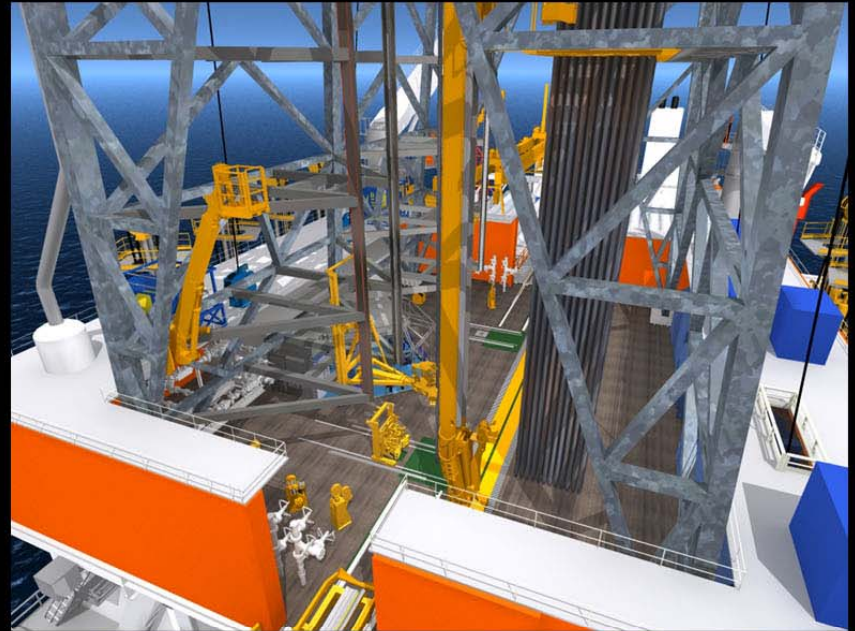

Drillship

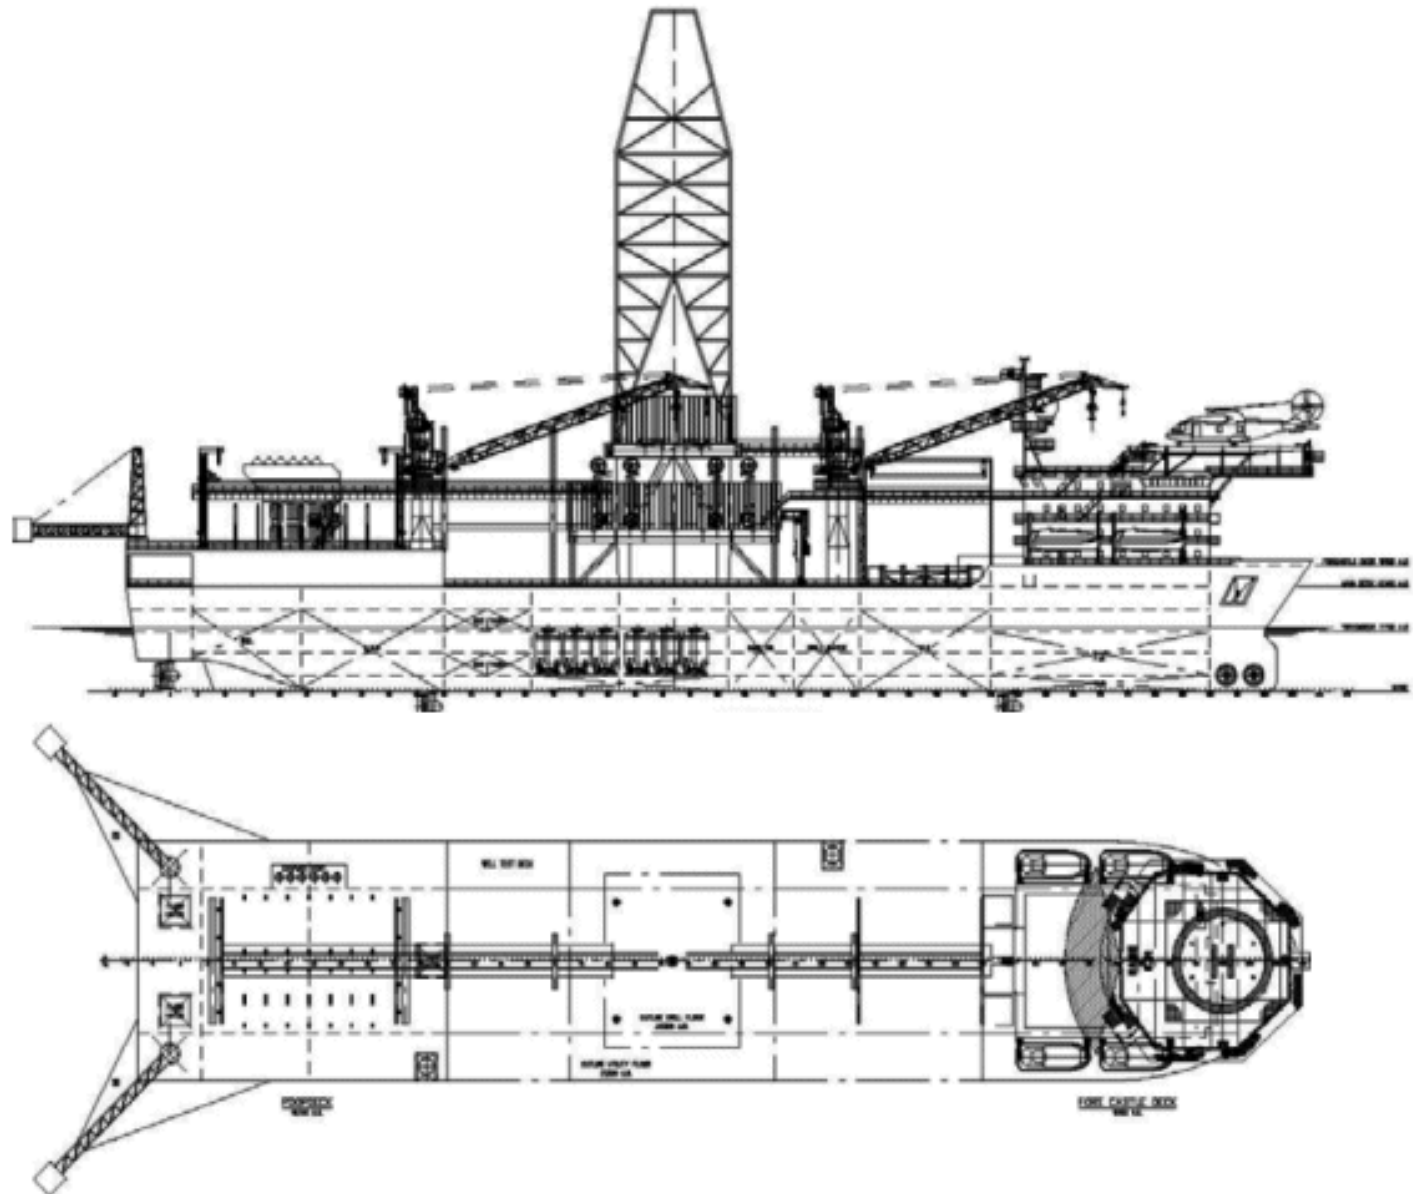

Drillship



©IODP/JAMSTEC

Drillship



FPSO


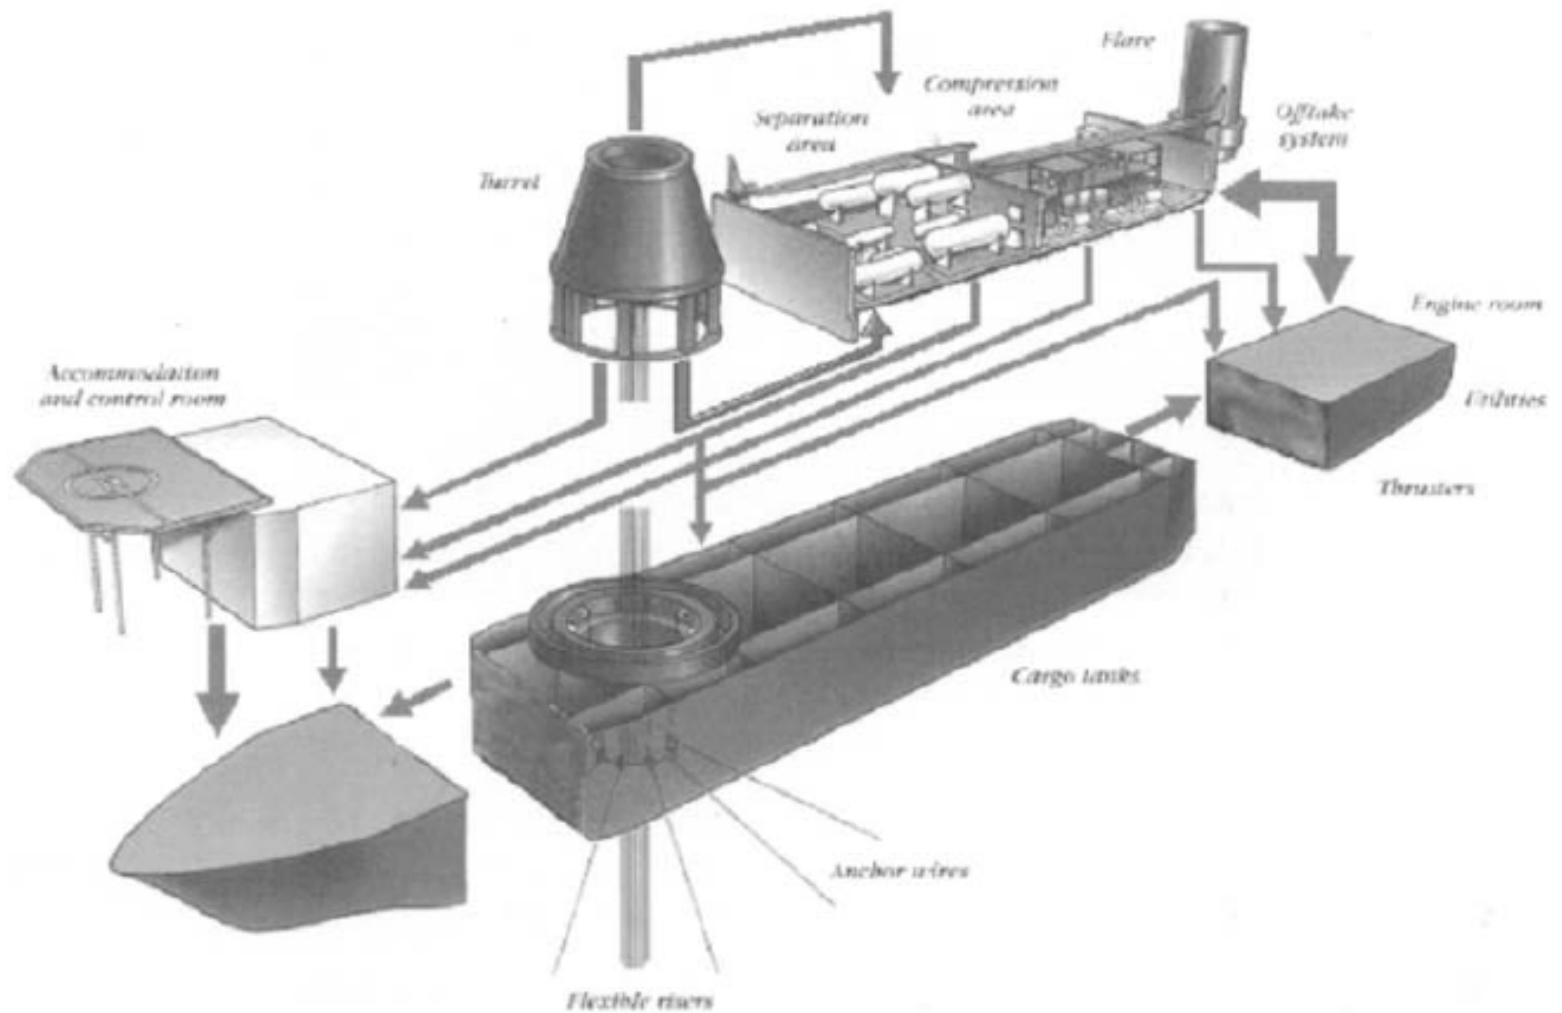


Figure 7.23 Typical new-build FPSO configuration (courtesy J. Ray McDermott, Inc.)


FPSO (Integral Bow Turret)



FPSO (Integral Bow Turret)

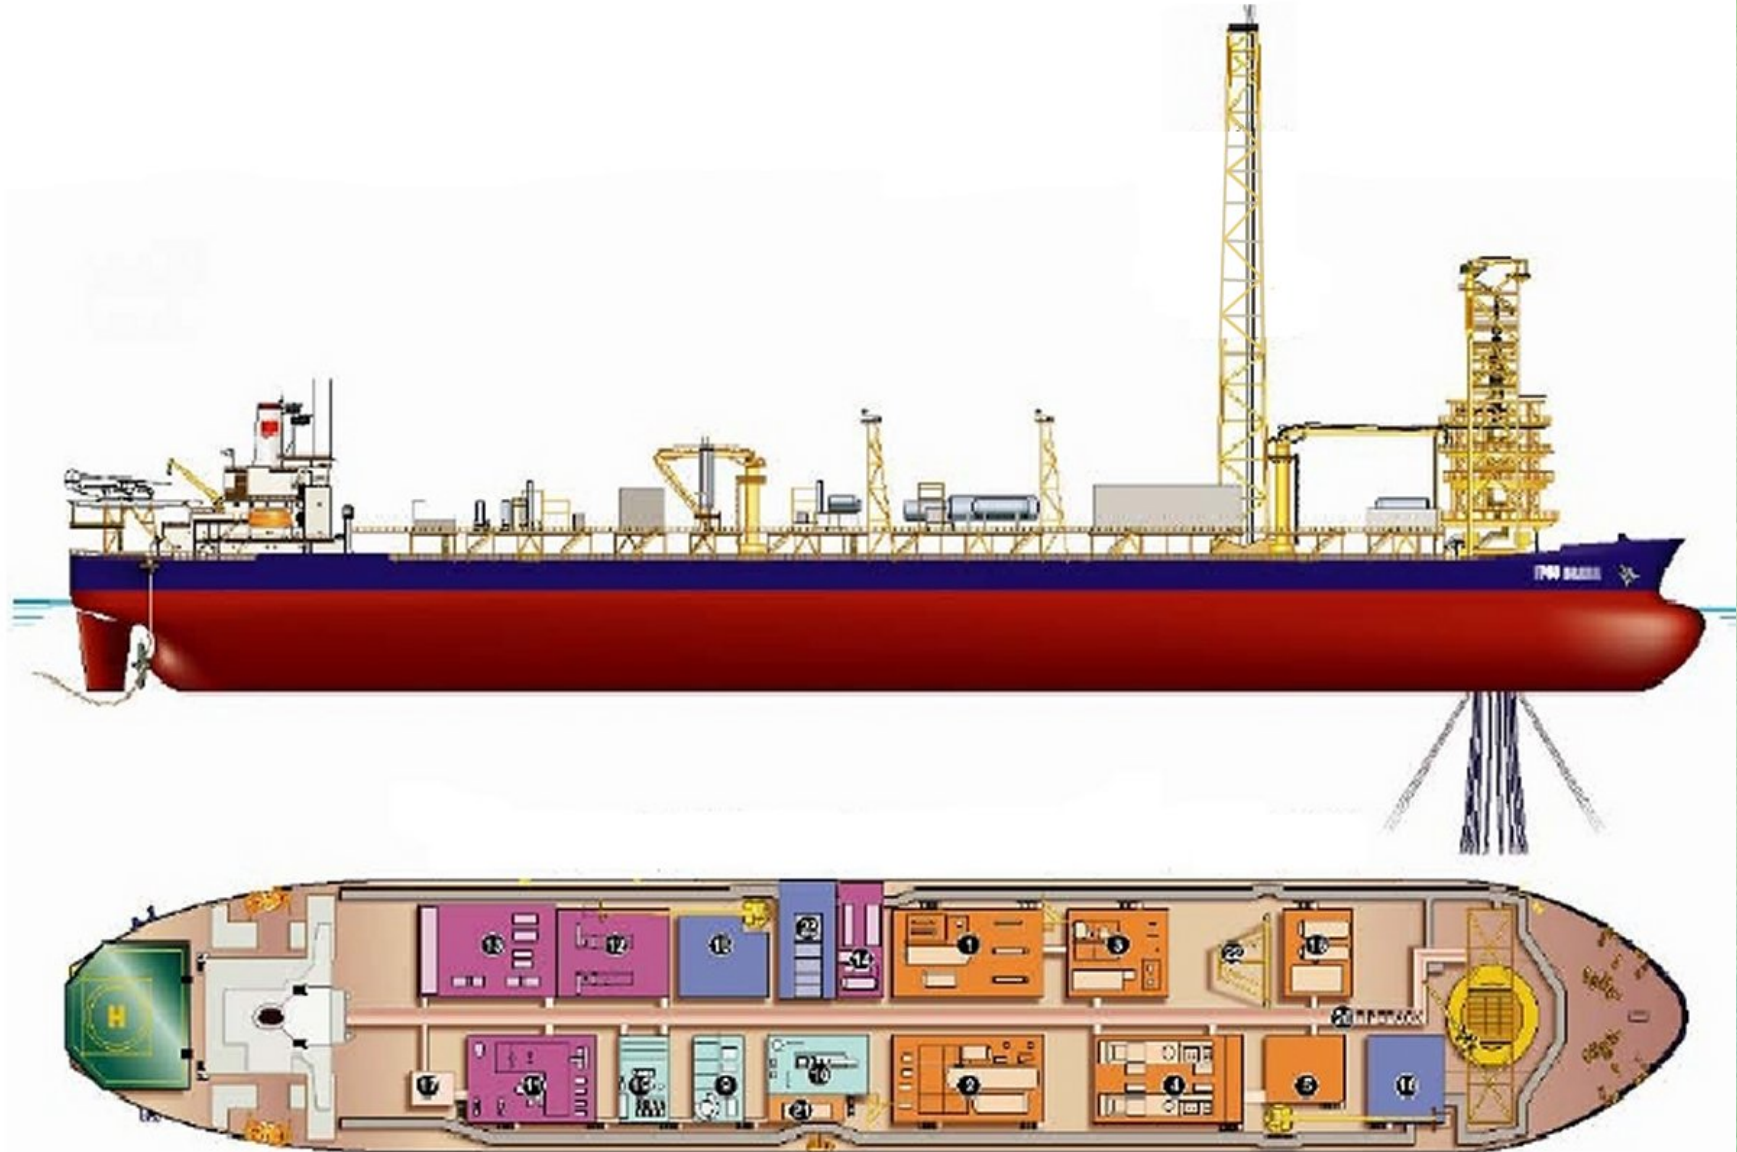

FPSO (Cantilevered Bow Turret)

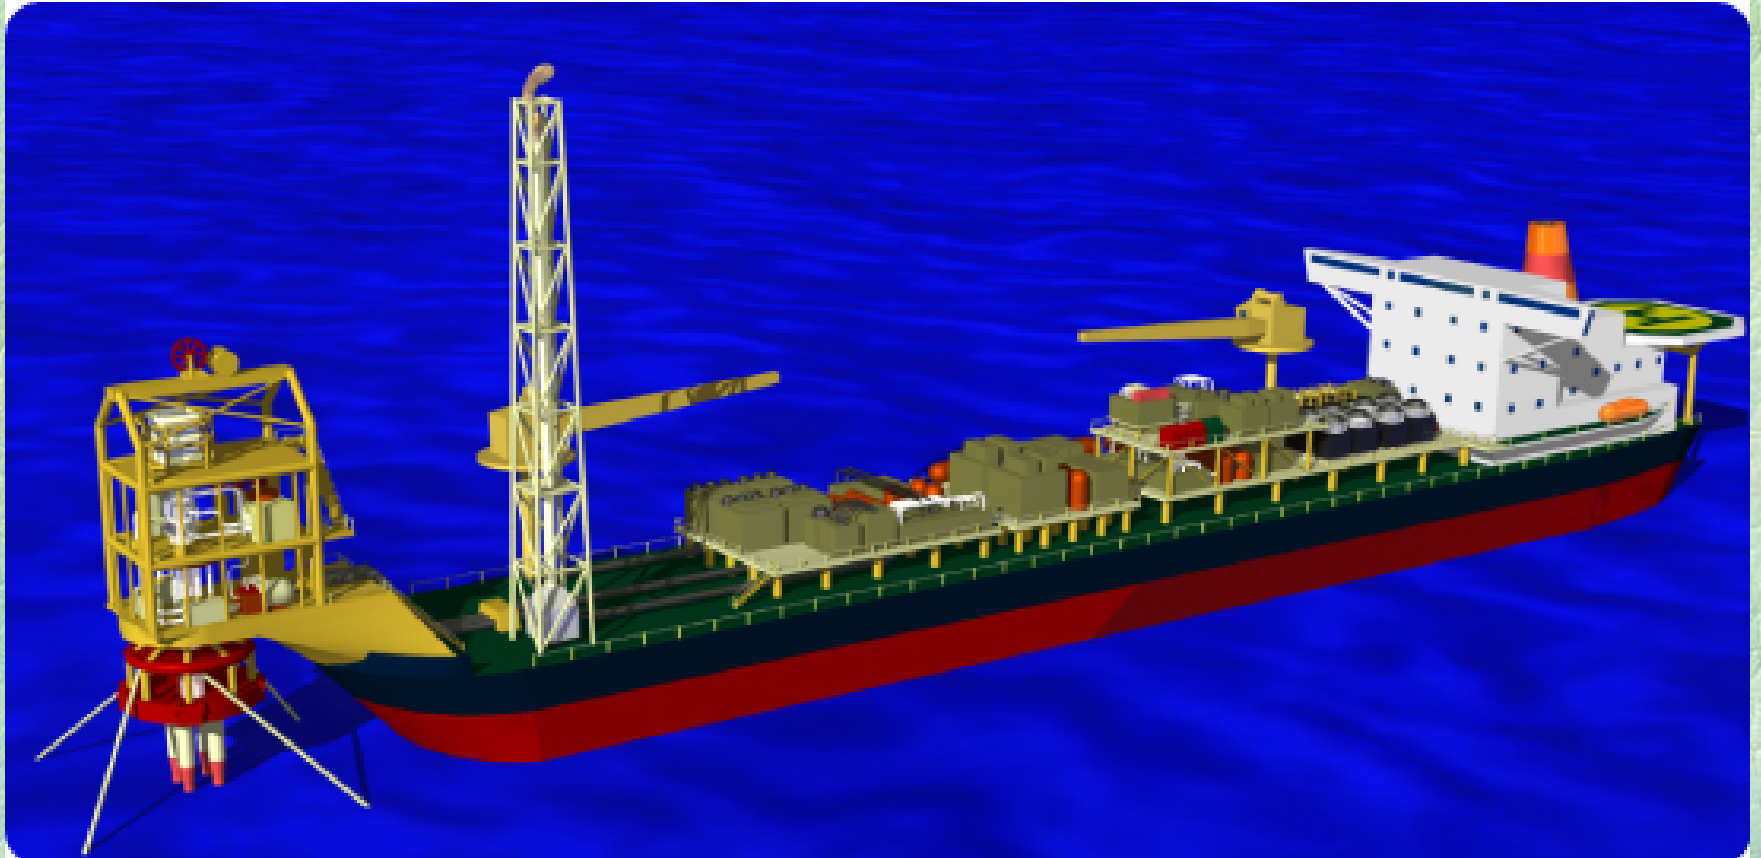

FPSO (Cantilevered Bow Turret)

